

METTLER TOLEDO

Table of Contents

1	General Information	3
1.1	Scope	3
1.2	Technical Support and Trainings	3
1.3	Language	3
1.4	Formatting and Meaning	3
1.5	Availability of Buttons and Screens	3
1.6	How to Use Screenshots	3
2	Safety	5
2.1	Explanation of Symbols	5
2.2	Principles of Proper Use	5
2.3	Intended Use	5
2.4	Organizational Steps	6
2.5	Qualifications of Personnel	6
2.6	Safety Instructions for Specific Phases of Operation	6
2.6.1	Normal Operation	6
2.6.2	Special Work, Maintenance Tasks and Correction of Malfunctions	7
2.7	Information About Specific Types of Danger	7
2.7.1	Electrical Power	7
2.7.2	Noise	8
2.7.3	Moving the System	8
2.8	Safety Regulations	8
3	System Description	10
3.1	Overview of the MAS	10
3.2	Technical Data	11
4	Components	12
4.1	Operational Area	12
4.2	Range of Application	12
4.3	Brief Description	12
5	Installation	13
6	Handling	14
6.1	Starting the System	14
6.2	Hand Scanner	14
6.3	Printer	14
6.4	Bundle to Case Aggregation	14
6.5	Case to Pallet Aggregation	15
6.6	PLM User Interface	15
6.7	System Shutdown	17
7	Troubleshooting	18
7.1	System Behavior After Loss of Power	18
7.2	Contact Technical Service	18
7.3	Alarm Messages	18
8	Cleaning and Maintenance	19
8.1	Visual Inspection and Cleaning of the System	19
8.2	Visual inspection of Gaskets/Seals	19
8.3	Spare Parts and Warranty	19
8.4	General Advice on Stainless Steel Maintenance	19
8.5	Cleaning the Touch Screen	20
9	Transport and Storage	21
9.1	Transporting the System	21
9.2	Preparing for Transport	21
9.3	Storing the System, Accessories and Spare Parts	21

10 Interfaces [IPC B&R 910 Raid]	22
10.1 Overview of the Interfaces	22
10.1.1 Ethernet	22
10.1.2 USB	23
10.1.3 Keyboard Connection	23
10.1.4 Serial Ports (COM1, COM2 and COM3)	23
11 EC Declaration of Conformity MAS 2.0	25
Glossary	26

1 General Information

1.1 Scope

This manual describes how to configure and use the Manual Aggregation Station (MAS). It is intended for personnel who operate the MAS in order to perform one of the following aggregation steps:

- Bundle to case aggregation
- Case to pallet aggregation

For information on how to use the PLM software (if installed) see the Pilot Line Manager (PLM) Operating Manual.

1.2 Technical Support and Trainings

At our website you find the latest information about our products and services. Please visit: <http://www.mtf.com/pce>

For any requests please do not hesitate to contact us via email or phone:

Service line: +49 (0) 6251 85 45 – 555 / Email: mtpce.service@mtf.com

We provide extensive seminars and trainings that will help you get the most from your equipment. Our application seminars focus on industry and application issues. Individual trainings can be arranged on demand. Please contact us to request your individual training.

1.3 Language

This document is the original operating manual.

1.4 Formatting and Meaning

The formats used in this manual have determined meanings. If they are used they denote the following:

Formatting

Format	Meaning
PC	Menu Paths, Buttons at the screen surface, fixed tab names, names of screens and dialogs
'apostrophes'	Names of fields, checkboxes, modes, parameters
<angle brackets>	wildcard for tab names of devices (individual names can be assigned)

1.5 Availability of Buttons and Screens

Always remember that many functionalities of the PLM need certain user rights. This means if your screen does not offer buttons shown in the user manual it is likely that you need more user rights which have to be assigned to your profile by an administrator. The usual way to assign user rights is to add a user to a user group. Thus the user obtains all user rights belonging to that group.

1.6 How to Use Screenshots

Below each screen you see the path how to get there¹. Additional actions that are to perform at this screen are described below the screen². Wildcard buttons³ and actions at the path⁴ are placed in brackets. See the following example:

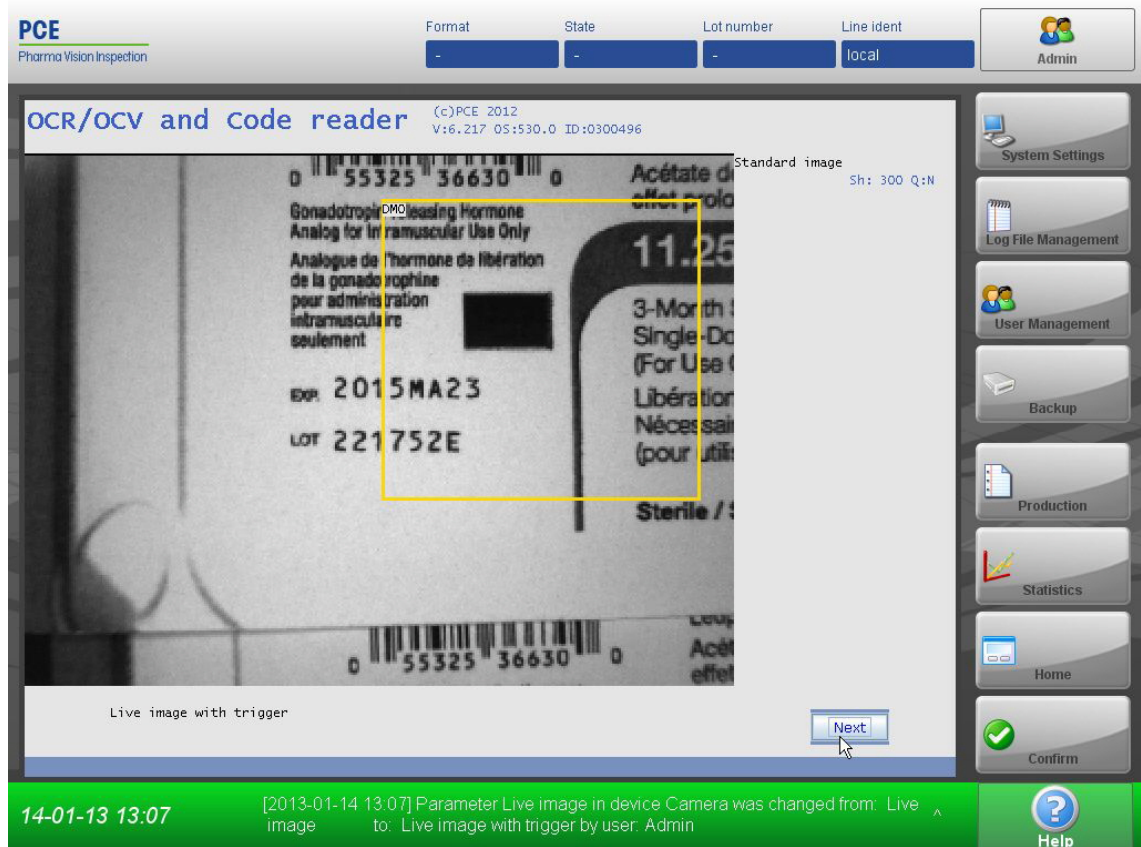


Figure 1: ¹Home>(<select smart camera bar>)³> Menu > Product management > New product > (enter product name)⁴> Enter (at the keyboard) > Live Image

²Press Next.

2 Safety

2.1 Explanation of Symbols

Requirements and prohibitions for the sake of preventing personal injury or extensive property damage are indicated according to their risk level by the terms CAUTION, WARNING or DANGER and emphasized by a warning symbol.



Note

This symbol indicates a useful information about the product.



⚠ CAUTION

< Kind and source of risk >

Warns users about the risk of minor bodily injury or damage to property.



⚠ WARNING

< Kind and source of risk >

Warns users about the risk of severe bodily injury or major damage to property.



⚠ DANGER

< Kind and source of risk >

Warns users that major bodily injury resulting in death can occur if instructions are not observed.



⚠ DANGER

< Kind and source of risk >

Warns users about electrical hazards.



⚠ WARNING

< Kind and source of risk >

Warns users about the risk of crushing.

2.2 Principles of Proper Use

- This system has been developed according to the latest technology and recognized safety regulations. Despite this, danger to life and limb of the user or of third parties can arise, and damage to the system and other property may occur.
- The system must only be used in a technically flawless condition, as intended and in accordance with the operating manual, and only by safety-conscious persons aware of the risks involved! In particular, any malfunctions affecting safety must be remedied immediately.

2.3 Intended Use

- This system is intended to be used solely for labeling (marking) and verification purposes. Any other use or use that exceeds the aforementioned scope is not in compliance with the intended use. In particular, the transportation of passengers is prohibited. The manufacturer/supplier is not liable for any damage arising from misuse. Risk is borne solely by the user.
- Intended use also includes the compliance with the operating manual, including any maintenance recommendations or instructions issued by the manufacturer.

2.4 Organizational Steps

- Always keep the operating manual close at hand in the location where the system is in use.
- In addition to the operating manual, observe all generally applicable legal and other mandatory provisions regarding accident prevention and environmental protection and instruct others to do so as well.
- Amend the operating manual by adding instructions, including supervisory and reporting duties, to allow for specific operational aspects, e.g. regarding the organization of work, processes, and assigned personnel.
- It is mandatory that all personnel assigned to perform tasks involving the system have read the operating manual, above all the safety information chapter, prior to starting their work.
- Regularly check that personnel members are working in accordance with the operating manual in a safety-conscious manner and are demonstrating risk awareness in doing so.
- Personnel members must refrain from wearing long hair in an open style and must not wear loose clothing or jewelry, including rings. There is a risk of injury caused by these objects becoming caught in the system.
- Make sure that all of the safety precautions / danger warnings are at/in/on the system and keep them in a legible condition.
- Observe all safety precautions / danger warnings at/in/on the system.
- In the event of changes in the system or its operating behavior, immediately shut down the system and report the malfunction to the appropriate department/person.
- Do not carry out any modifications, additions or retrofits to the system without manufacturer/supplier approval if they could impact the system's safety. This also applies to the installation and setup of safety devices, as well as to any welding and drilling work on load-bearing parts.
- Spare parts must meet the technical requirements specified by the manufacturer. This is always guaranteed for original spare parts.
- Adhere to the deadlines for recurring inspections if these are specified in the operating manual.
- For the performance of maintenance work, the proper workshop equipment for the task at hand is absolutely necessary.

2.5 Qualifications of Personnel

For the purpose of these operating manual, a "qualified person" is one who is familiar with the operation of the system and the hazards involved.

- Work at/using the system must only be performed by authorized personnel
- Only assign trained or instructed personnel to such tasks. Clearly define personnel responsibilities for operating, setup, maintenance and repairs
- Make sure that only assigned personnel uses the system
- Define the machine operator's responsibilities and grant him/her the power to reject any instructions from third parties which do not comply with safety regulations
- Only allow personnel that is currently being trained or instructed or is undergoing general vocational training to use the machine under the supervision of a person with experience
- Work on the system's electrical equipment must only be carried out by qualified electricians or by instructed persons under the guidance and supervision of a qualified electrician in accordance with electrical engineering regulations!
- The personnel has to be trained in the proper care and use of protective equipment in accordance with established safety practices

2.6 Safety Instructions for Specific Phases of Operation

2.6.1 Normal Operation

- Refrain from working in any manner that poses a safety risk.
- Take steps to ensure that the system is only operated in a safe and functional condition.
- Only operate the system if all safety and safety-critical devices, e.g. removable protective devices, emergency shut-off devices (optional) and sound insulation, are available and functional.

- Inspect the system for externally visible defects at least once per shift. Immediately report any changes that occur (including changes in operating behavior) to the appropriate department/person. Shut down and secure the system.
- Immediately shut off and secure the system in the case of malfunctions; have faults remedied promptly.
- Observe operating manual instructions for powerup and shut-off procedures and control displays.
- Before powering or starting up the system, make sure that personal safety cannot be endangered by the system as it warms up.

2.6.2 Special Work, Maintenance Tasks and Correction of Malfunctions

- Comply with all setup, maintenance and inspection tasks and intervals prescribed by the operating manual, including specifications for the replacement of parts or part assemblies. These tasks must only be performed by qualified personnel.
- Inform operating personnel before starting any special work and maintenance tasks. Designate a supervisor.
- Follow the powerup and shut-off procedures and maintenance work instructions specified by the operating manual when performing any task involving the operation, production adjustment, changeover or setting of the system and its safety-critical devices, as well as inspections, maintenance and repairs.
- If necessary, secure a large area around the location of the maintenance work.
- If the system is completely switched off for maintenance and repair work, it must be secured against unexpected restarts:
 - Lock the main control devices and remove the key and/or
 - Place a warning sign on the main power switch.
- Assign only experienced persons to the task of fastening loads and directing the operators of cranes or industrial transport vehicles! The directing person must maintain visual or verbal contact with the operator.
- For overhead installation work, use either the climb-assistance equipment and work platforms provided or other units that satisfy safety requirements. Do not use machine parts as a form of climb assistance! Wear fall-arresting equipment when performing maintenance work at great heights.
- Keep all devices, steps, railings, landings, platforms and ladders clean.
- Before cleaning the system with water or other cleaning agents, cover or tape shut any openings into which no water/fumes/cleaning agents is to enter for reasons of safety and proper system functioning. Electric motors and switch cabinets, in particular, must be protected. Note the protection class.
- After cleaning the system, be sure to completely remove any covers/tape used.
- After cleaning the system, inspect all cable joints and compressed air connections for leaks or looseness, abrasion, and damage. Immediately remedy any defects found or have these remedied by the appropriate person.
- Always tighten screw connections that have been loosened during maintenance and repair work.
- If it is necessary to disassemble safety devices during setup, maintenance and repairs, the safety devices must be reassembled and inspected immediately following completion of the setup, maintenance and repair work.

2.7 Information About Specific Types of Danger

2.7.1 Electrical Power

- Work on electrical systems or equipment must only be carried out by qualified electricians or by instructed persons under the guidance and supervision of a qualified electrician in accordance with electrical engineering regulations.
- Where required, machine and system parts that are to undergo inspection, maintenance or repairs must be disconnected from the power supply. First, check that the disconnected parts are not live, then ground and short-circuit them. Isolate any nearby live parts.
- The electric equipment of a system must be inspected regularly. Any defects – such as loose connections or charred cables – must be remedied immediately.

2.7.2 Noise

- If required by applicable noise control regulations, the operator must ensure that noise control equipment is present and in the proper protective position during operation of the system.

2.7.3 Moving the System

- Only use hoists and load suspension devices with sufficient load-bearing capacity during loading or shipping.
- Designate competent personnel to direct the lifting procedure.
- Only lift machines properly, using a hoist according to the specifications contained in the operating manual (fastening points for load suspension devices).
- Only use suitable transport vehicles with sufficient load-bearing capacity; carefully secure the load.
- Disconnect the system from all external power sources before moving it even a short distance. Before putting the system back into operation, reconnect it properly to the power source and compressed air supply.
- When putting the system back into operation, be sure to proceed according to the instructions contained in the operating manual.

2.8 Safety Regulations

- Before connecting the system, check whether the voltage of your power supply system conforms to the voltage specified on the system's type plate.



CAUTION

Risk of injury

In order to avoid accidents, the device must only be opened by trained personnel in accordance with applicable safety regulations.



DANGER

When using frequency converters, leakage currents may arise.

The sole use of residual-current circuit breakers is not permitted. Protective grounding is a mandatory requirement. The protective grounding must be configured in accordance with the current load of the connecting cable. Fixed wiring is required according to VDE 0160.

Install the protective grounding.

Configure the power supply fuse in accordance with the current load of the connecting cable.



DANGER

Risk of fatal injury from electrocution

Disconnect the power plug or switch off power to the system before opening the device or when performing maintenance work.

If power to the system is switched off from a remote point (e.g. distribution box, fuse box or control box), precautions must be taken to prevent an accidental system restart (e.g. lock the box and place a warning sign on it).

If the system is factory-equipped with input or output conveyor belts which are separate from the system and stand on their own frame, power is normally supplied to these conveyor belts from the base of the system. Therefore, the system must be disconnected from the power source before an input/output conveyor belt or the entire system is moved or repositioned. The electric cables to the input or output conveyor belt must be disconnected by a qualified electrician. When moving/repositioning is complete, the electric cables must be reconnected by a qualified electrician.

Only operate the system if it is connected to a power source that is correctly grounded and complies with the general safety regulations.



WARNING

If the system is operated in an improper or careless manner, injuries may occur as a result of the running conveyor belts or conveyor chains.

Always be sure to maintain a proper safe distance from the machine if you have long hair or are wearing loose-fitting clothing (wide sleeves, scarfs, shawls).

In the event of danger, immediately shut off the system and disconnect the power plug.

3 System Description

3.1 Overview of the MAS

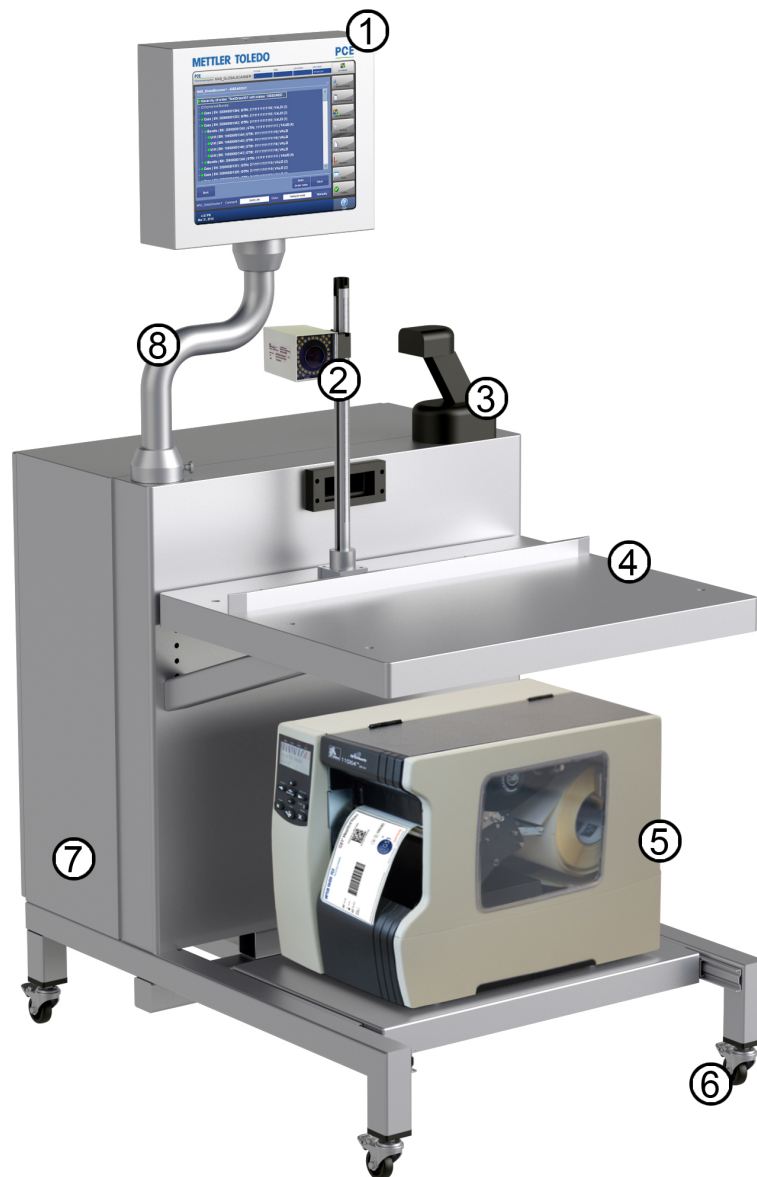


Figure 2: Overview of the MAS

- 1 Touchscreen with 1 USB port and 1 LAN port
- 2 Camera with positioning unit
- 3 Hand scanner
- 4 Work table
- 5 Printer
- 6 Castors with full range of movement
- 7 Control Cabinet
- 8 Swivel arm

3.2 Technical Data

Technical Details	Manual Aggregation Station
Measures (HxWxD) in mm	1678 x793 x1035
Control cabinet (HxWxD) in mm	760 x 760 x 300
Power supply	115/230V VAC 50/60 Hz, Single Phase, \geq 1000 VA
Working height (in mm)	The work table is adjustable to the following heights: 805 / 830 / 855 / 880 / 905 / 930 / 955 / 980
Interfaces	Serial (COM1, COM2 [and COM3]), RS232C, USB (expandable via hub), Ethernet (RJ45) 100/1000 MBit/s
System power consumption	Approx. 1000 VA; For designs with equipment: up to 2000 VA

4 Components

The MAS 2.0 contains the following components

- Central operation via HMI
- Smart Camera (SMC)
- High-performance LED lighting (maintenance-free)
- IPC (Windows-based)
- UPS
- Central main switch; 230V power supply unit
- Signal lamp (optional)
- Global hand scanner (Wireless)
- Aggregation hand scanner

The Pilot Line Manager PLM is the line management component of the Pilot Software Suite. It centrally controls and manages units such as printers, cameras and scanners on one line. The connected units are provided with statistical data (e. g. batch and EXP) at production start and with dynamic data (serial numbers) in the production process. The operator is able to manage all devices on the line with minimum effort. The selected settings are saved in the central format database (please consult the detailed information in the PLM Operating Manual).

4.1 Operational Area

The verification of all items is performed by the code reading device. The data matrix codes are aggregated by the PLM.

4.2 Range of Application

Depending on how the line is structured, aggregation is either conducted from **bundle to case**, from **case to pallet**, or from **bundle to pallet**. The MAS 2.0 can also be used as a rework station.

4.3 Brief Description

The Manual Aggregation Station (MAS) is designed for the setup of the hierarchical levels in manual final packaging.

Workflow

The hand scanner scans all labels on the packaging unit and sends them to the PLM for verification. The PLM verifies the scanned data for correctness and automatically triggers the label print for the higher unit. The printing system generates the label with the predefined characteristics, e.g. serial number, and prints it out. The hand scanner is used to conduct a complete verification by verifying that the label is legible. Thus, traceability is completely documented and verifiable up to the final packing step. The data can be transmitted to the primary IT system using the PCE Pilot Site Manager (PSM).

Module Structure

Standardized interface modules are available for this via SOA/Webservices. The generated data can be scanned, managed and documented with data from other production sites. Thanks to its module structure, the MAS can be individually adjusted to the current situation of the packaging line. The unit can be operated via an independent PLM or via a PLM that is already integrated into the line.

Signal Light Color Meaning

If the system is provided with a signal light, the colors have the following meaning:

Color	Meaning
Green	System running
Yellow	Teach-in
Red	System stopped

5 Installation

Connect the MAS to the power supply. The input voltage should be between 115 and 230 VAC.

The PLM is installed on the MAS before delivery. Adapt the PLM according to the desired formats. Take the necessary steps detailed in the PLM operating manual.

6 Handling

6.1 Starting the System

- Make sure the system is at the intended production position and the power supply cable is connected to power source
- 1 Plugin the system power supply cable
- 2 Switch on the main switch



Figure 3: Main Switch

- ⇒ The IPC and the installed software are started after switching-on the power
- 3 Log-on at the system IPC with username and password.
- ⇒ The system and the software are started and ready for use.

6.2 Hand Scanner

Depending on the range of application two or three handheld scanners are available at the MAS for the various functions.

The hand scanners are configured depending on how the aggregation is going to be performed.

The scanner for general functions is generally a Bluetooth scanner. As an "information reader" this hand scanner is used to book in/book out cases and/or pallets.

6.3 Printer

Bundle to Case Aggregation

Number of printers: 1

- Case label printer

Bundle to Case to Pallet Aggregation

Number of printers: 2

- Case label printer
- Pallet label printer



Note

For maintenance, refill and troubleshooting of the printer, refer to printer manual

For Maintenance, Refill and Troubleshooting and all other tasks concerning the printer, refer to printer manual.

6.4 Bundle to Case Aggregation

The bundles, which were previously and correctly labeled in the bundle station (e.g. PCE Advanced Bundle Station), reach the MAS via the conveyor belt. The bundles are manually packed in a shipping carton. Each bundle in a carton is scanned one after the other with the handheld scanner for bundles. Once the specified

number of bundles has been reached, the printer (e.g. Zebra label printer) prints the shipping carton label. The label is attached manually to the shipping carton and scanned with the scanner for carton labels. The shipping carton is thereby aggregated.

6.5 Case to Pallet Aggregation

All correctly labelled shipping cartons are scanned with the handheld scanner and packed on a pallet. Once the pallet has reached the pre-defined number of shipping cartons, the label printer prints the label for the pallet. Said label is attached to the pallet.

6.6 PLM User Interface

- 1 Press the main switch. The PLM or the remote desktop starts automatically.
- 2 Log in as a user.
- 3 Select the handheld scanner from the main menu (overview).
- 4 Take the hand scanner and scan the barcode for the bundle or the shipping carton.

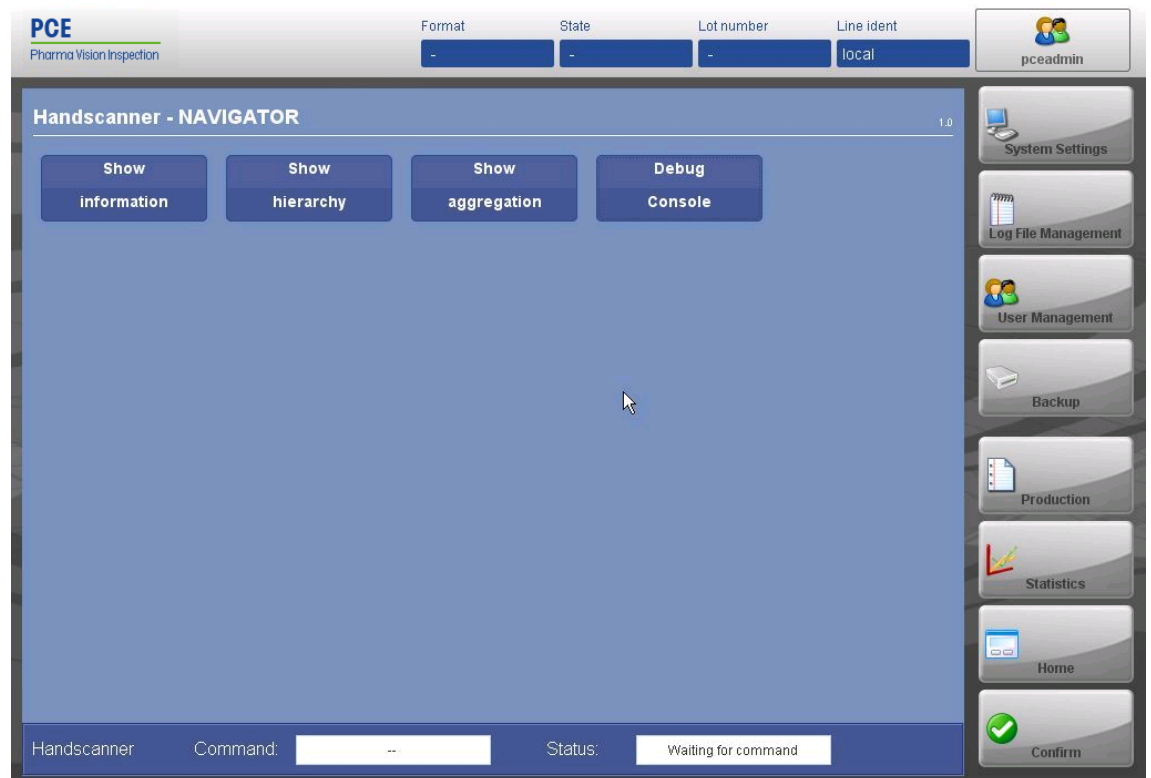


Figure 4: Home>Hand Scanner

- 5 Perform one of the following options to get the wished Information
 - ⇒ a) Click on the "Show information" button (Image 2) to display the code scanned by the hand scanner.

PCE
Pharma Vision Inspection

Format: - State: - Lot number: - Line ident: local

Login

HS - INFORMATION

Status: printed: 1 verified: 1 valid: 1 aggregated: 1 (1) 100030160111

Datamatrix: (01)08699548092732(21)100030160111

Date last changed: 2011-12-01 19:46:32.423

Record changes: 2

Order ID: TEST1

Line ID: local

Line format: AGG_TEST_01

Order state: 2

Start time: 2011-12-01 19:46:22

(10) BATCH/LOT: 740018D

(17) EXPIRY DATE: 2011-12-31

(R05) COMP PREFIX: 4032046

Back Book out Clear

HS Command: SHOW_INFO Status: Waiting for serial Manually

System Settings
Log File Management
User Management
Backup
Production
Statistics
Home
Confirm

Figure 5: Home>Hand Scanner>(Scan Code)> Press 'Show information'

- ⇒ b) Click on "Show hierarchy" to display the placement of the current order's scanned code in the hierarchy. Hierarchy is shown in a tree format.

PCE
Pharma Vision Inspection

Format: - State: - Lot number: - Line ident: local

Login

HS - HIERARCHY

Hierarchy of order: TEST1 with status: 2

- Orphaned FS
- KT | SSCC: 340320460000001045 | NOT VERIFIED (10)
 - FS | SN: 100030160111 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160133 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160155 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160156 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160157 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160158 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160160 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160161 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160162 | GTIN: 08699548092732 | VALID
 - FS | SN: 100030160163 | GTIN: 08699548092732 | VALID

Back Enter Ordername Clear

HS Command: SHOW_HIR Status: Waiting for serial Manually

System Settings
Log File Management
User Management
Backup
Production
Statistics
Home
Confirm

Figure 6: Home>Hand Scanner>(Scan Code)> Press 'Show hierarchy'

- ⇒ c) Click on "Show aggregation" to display the progress of the executed aggregation in the current aggregation step.

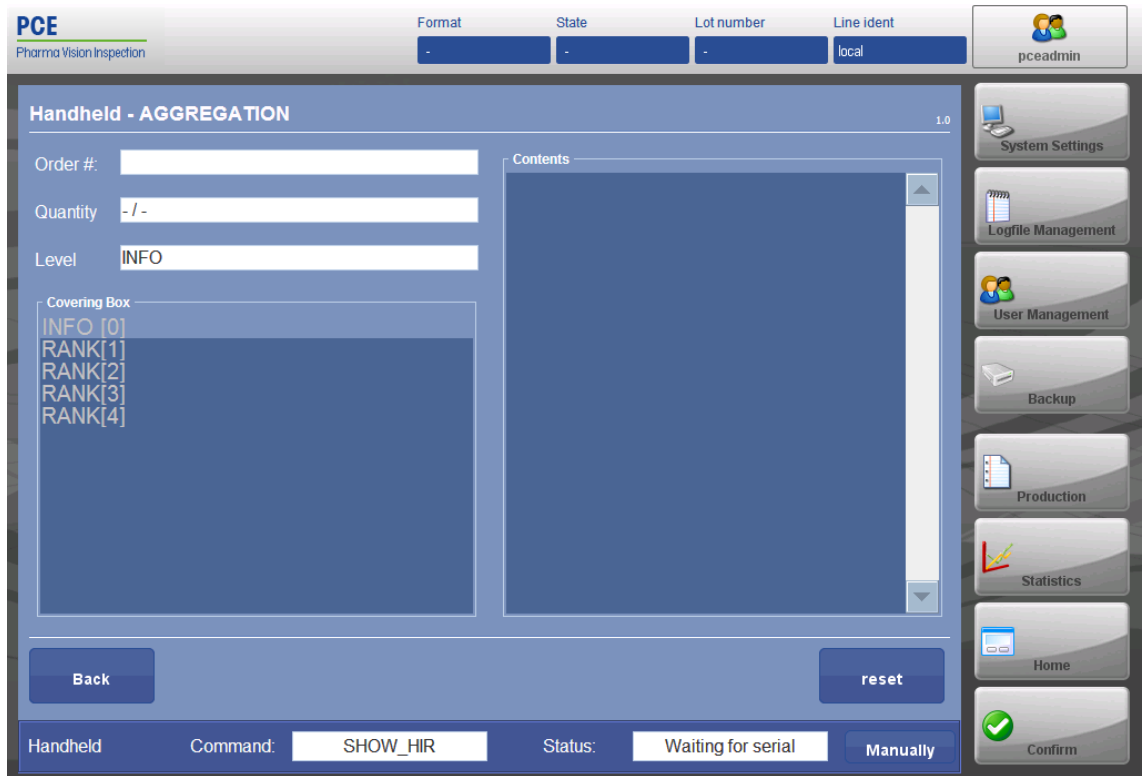


Figure 7: Home>Hand Scanner>(Scan Code)> Press 'Show aggregation'

⇒ Detailed information on the operating the PLM can be found in the PLM operating manual.

6.7 System Shutdown

To shut down the system, perform the following task.



Note

Make sure the order is suspended or finished before switching off the power

Switching off while an order is running may cause a loss of production data

- Make sure the current order is suspended or finished

- 1 Switch off the power switch



Figure 8: Main Switch

⇒ System will shut down properly thanks to the uninterruptible power supply.

7 Troubleshooting

7.1 System Behavior After Loss of Power

When power to the system is restored, the system will automatically restart.

The operating procedure corresponds to the procedure used after the main power switch has been turned on.

7.2 Contact Technical Service

If you encounter persistent problems and would like to call Technical Service or the service hotline, please be ready to provide as much information as possible:

- Type (model)
- Serial number
- Year of manufacture
- PCE order number and order date (if known)
- Software version displayed on the terminal
- Wording of the error message displayed or a precise description of the problem this enables us to help you more efficiently.

7.3 Alarm Messages

Plain-text alarm messages appear at the terminal in the info field of the basic display and provide information about particular processes or malfunctions. For information about the alarm messages refer to the Alarm List.

8 Cleaning and Maintenance

8.1 Visual Inspection and Cleaning of the System

Recommended inspection interval	What needs to be done?
Daily	Perform a general visual inspection.



⚠ WARNING

Cleaning the system when it is hot may cause severe damage.

Only clean the system with liquid when it is cooled down to room temperature.



⚠ WARNING

Careless cleaning may cause severe damage.

Never use a high pressure jet to hose down the system.

Do not use caustic cleaning agents containing solvents to clean the system and the terminal. Never use pure alcohol or concentrated acid or lye.

Use particular care when cleaning in order to avoid damage and, above all, to prevent water from entering the system.

- Clean the system and terminal using soft cloths dampened with a mild solution of soap and water or a commercially available glass and plastic cleaner.

8.2 Visual inspection of Gaskets/Seals

Recommended inspection interval	What needs to be done?
Monthly	Perform a general visual inspection. if necessary, clean the light barriers.

8.3 Spare Parts and Warranty



⚠ CAUTION

For safety and warranty reasons, only Technical Service or technical personnel authorized by PCE are permitted to replace a motor or the terminal.

If you would like to perform these maintenance tasks yourself, please contact our service hotline for information about the required training for your personnel.



Note

Keep spare parts on hand

Keeping spare parts on hand – especially for wear parts – can help reduce downtime. Please contact us if you have any questions.

8.4 General Advice on Stainless Steel Maintenance

Stainless steel generally provides much better protection against corrosion when compared with steel or aluminium. Stainless steel, however, does not always remain rust-free. Stainless steel can also become dirty or rusty to some extent, depending on the operational use and the conditions in the working environment. The most common causes are surface rust (fine iron particles in the air), active gases, the accumulation of sediments and the build-up of salts. These superficial damages can be easily removed by using a stainless steel spray daily. After cleaning with soap and water, you should check that the residue is washed off with a suitable amount of water.

8.5 Cleaning the Touch Screen

The display surface is made from glass and the casing from stainless steel. To ensure efficient operation, the surface of the touch screen should be cleaned regularly. Only special cleaning wipes and cleaning agents should be used:

- Commercial cleaners for computer equipment
- Alcohol-based disinfectants



CAUTION

Solvents can damage the display.

Never use diluting agents, benzene, abrasives or other strong solvents, as these can damage the display!

9 Transport and Storage

9.1 Transporting the System



CAUTION

Risk of injury and damage to property

When the system is transported using a lift truck or other similar vehicle, its upper section should be held in place by one additional person (or two additional persons, if necessary) to prevent the system from tipping over.

The weight of the system is considerable, and its center of gravity varies depending on the specific structural design desired by the customer. It is therefore difficult to provide recommendations for specific lifting points. You can find more detailed (i.e. order-specific) information on the center of gravity in the accompanying documents.

9.2 Preparing for Transport

- Shut off the system and have it disconnected from the power supply by a qualified electrician.



CAUTION

The system must never be subjected to major mechanical stresses (impacts, etc.). Impacts – regardless of the direction from which they act on the system – or falls can destroy the system.

Make sure that any protruding parts such as light barrier holders, etc. do not become bent and do not injure anyone.

Take particular care to protect plastic covers.

9.3 Storing the System, Accessories and Spare Parts


- Store the system upright in the original packaging in a clean and dry place until it is to be installed.
- Keep all electronic parts delivered in antistatic bags in their bags until the parts are to be used. This ensures that they are optimally protected.

10 Interfaces [IPC B&R 910 Raid]

10.1 Overview of the Interfaces

All interfaces are located on the IPC unit of the system. The unit is mounted inside the cabinet (depending on the design).

IPC Overview

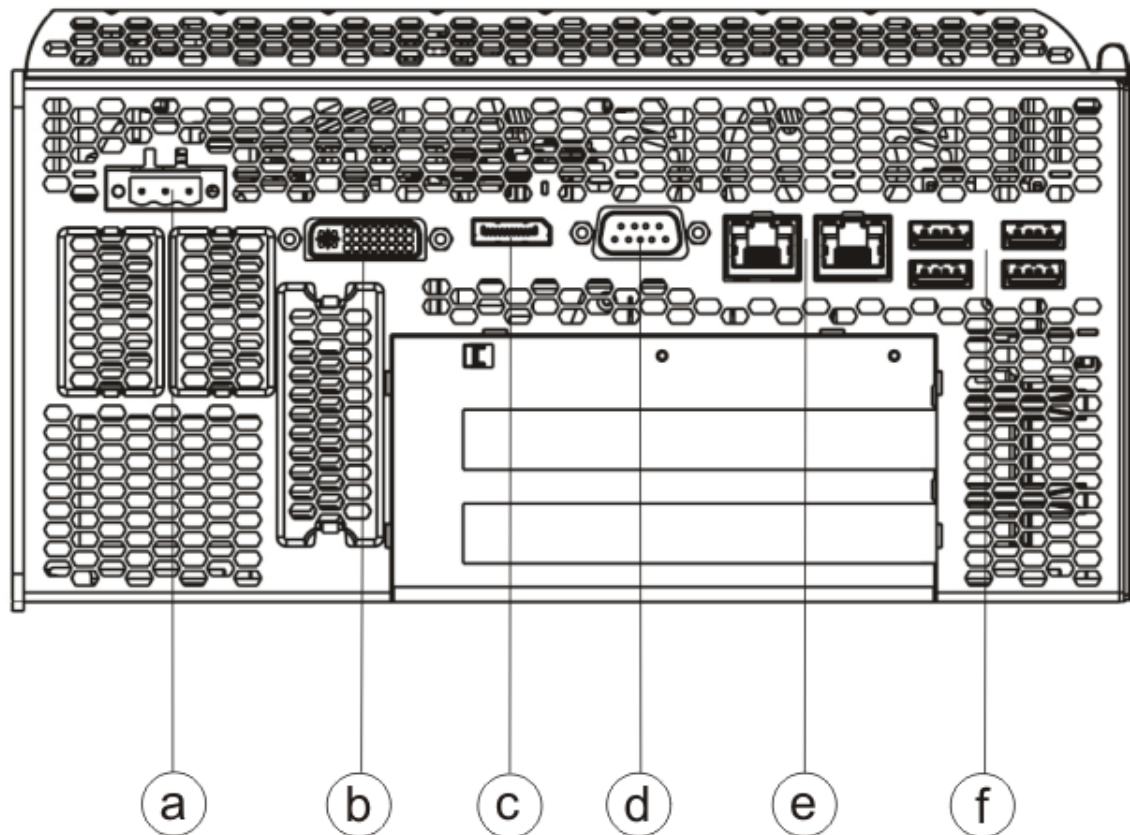

a	Power connector (24V AC-IN or phoenix plug)
b	DVI port
c	Display port
d	RS232 port (COM1)
e	2 x Ethernet
f	4x USB 3.0



Note

Interfaces are for internal use only

All interfaces are for internal use only and cannot not be used by operators.

10.1.1 Ethernet

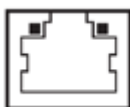


Figure 9: Ethernet port

Ethernet is a computer networking technology for local networks. The ethernet interface is a pluggable connection. A connection (link) is indicated by a steady yellow LED (on right side of connector) and data transmission (active) is indicated by a green LED (on left side of connector, flashes during data transfer).

10.1.2 USB



Figure 10: USB port

USB is a serial I/O interface. The USB ports comply with the USB 2.0 specification and are located on the IPC and on the outside of the control cabinet.

If you require more USB ports, then a USB hub can be used to expand one of the ports and to provide additional connections. PCE is responsible for the technical design of the hub.

10.1.3 Keyboard Connection



Figure 11: USB port

It is possible to connect a standard external keyboard to the System via USB port.

10.1.4 Serial Ports (COM1, COM2 and COM3)

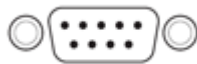


Figure 12: Serial port

Depending on the IPC variant, the terminal has two or three serial ports: COM1, COM2, COM3, COM4). Possible interface type: V24/RS232C interface, with or without handshake lines, with a maximum transmission distance of 10 m.



Note

All serial interfaces are for internal use only

Do not use interfaces for external purposes.

All used cables must comply with the following specifications:

- Shielded
- Twisted pairs
- Line resistance <125 ohm/km
- Line cross section >0.14 mm²
- Line capacitance <130 nF/km

COM1, COM2 (and COM 3):

D-sub, 9-pin (male). Required mating plug: D-sub 9 (female).



Note

RS232C with handshake lines

For data transmission without handshaking, the male connector should not use pins 7 (RTS) and 8 (CTS).

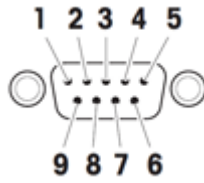


Figure 13: RS232 port allocation

1	- not used -	6	- not used -
2	RXD, system receive line	7	RTS
3	TXD, system send line	8	CTS
4	- not used -	9	- not used -
5	Ground / Gnd		

11 EC Declaration of Conformity MAS 2.0

PCE

Pharmacontrol Electronic GmbH



EG-Konformitätserklärung

EC Declaration of Conformity

Pharmacontrol Electronic GmbH
Gernsheimersstr. 2
D-64673 Zwingenberg

erklärt in alleiniger Verantwortung, dass das Produkt:
declares in sole responsibility that the product:

MAS 2.0
MAS 2.0

Verwendungszweck:
Intended purpose:

Manuelle Aggregation
Manual Aggregation

Art.-Nr.:
Art.N°:

FRA_1.01.4102.20.0000

In Übereinstimmung mit den folgenden EG-Richtlinien:
In accordance to the following EC directives:

2006/42/EG (Maschinenrichtlinie / Machinery Directive)
2006/95/EG (Niederspannung / Low Voltage)

entsprechend folgender Spezifikationen konstruiert und hergestellt wurde:
has been designed and manufactured to the following specifications:

DIN EN ISO 12100

Sicherheit von Maschinen – Allgemeine Gestaltungsgrundsätze
Risikobeurteilung und Risikominderung
Safety of machinery - General principles for design - Risk assessment
and risk reduction
Sicherheit von Maschinen – Elektrische Ausrüstung von Maschinen
Safety of machinery – Electrical requirement of machines.

DIN EN 60204-1:2011-01

Zwingenberg, 04.12.2014

(Ort, Datum / Place, Date)

(Product Champion: Jan Ahlgrimm)

Zwingenberg, 04.12.2014

(Ort, Datum / Place, Date)

(General Manager: Björn Bundeschuh)

Glossary

Bundle

A bundle is a packaging unit at the aggregation process. It consists of several items. It is usually aggregated to a case or directly to a pallet.

Case

A case is a packaging unit at the aggregation process. It consists of several items or bundles. It is usually aggregated to a pallet.

COM

Serial interfaces for bidirectional data transfer between the PC and peripheral devices.

DVI

Digital Visual Interface

EXP

Expiration date

HMI

Human Machine Interface

HxWxD

Height x Width x Depth

IPC

Industrial PC

LED

Light-emitting diode

MAS

Manual Aggregation Station

Pallet

A pallet is a packaging unit at the aggregation process. It consists of several cases.

PCE

Pharmacontrol Electronic GmbH

PLM

Pilot Line Manager

PSM

Pilot Site Manager

RS232

Standard for a serial interface

RXD

System receive line. This line is for the serial encoded data received by a computer from a device.

SMC

Smart Camera

SOA

Service-Oriented Architecture

TXD

System send line. This line is for the serial encoded data sent from a computer to a device.

UPS

Uninterruptible power supply

USB

Universal Serial Bus

VA

Volt-ampere

VAC

Volt Alternating Current

To protect your product's future:

METTLER TOLEDO Service assures the quality, measuring accuracy and preservation of value of this product for years to come.

Please request full details about our attractive terms of service.

www.mt.com/pce

Further information

Pharmacontrol Electronic GmbH

64673 Zwingenberg, Germany

Tel. +49 6251 8545-0

Fax +49 6251 8545-111

www.mt.com

Subject to technical changes.

© Pharmacontrol Electronic GmbH 2015-02-02

Version C